How to assemble the GOLORFUN®

NEW CRACKER



Hold the centre of the cracker and squeeze it into a box shape.







Push one side towards the centre of the cracker at the folds (BE GENTLE AND DO NOT SQUEEZE TOGETHER TO AVOID TEARING).

Tie a bow with provided ColorFun® ribbon.







Use the end that is still open to fill the cracker with your ColorFun® items.





Repeat Step 2 on the remaining side. Push remaining side towards the centre of the cracker at the folds (BE GENTLE AND DO NOT SQUEEZE TOGETHER TO AVOID TEARING).











